



## QUICK CARD

### Using the Apple Mobile Tech App

This quick card outlines how to use the Mobile Tech App (MTA) on an Apple smartphone or tablet to download and email test reports.

#### ENABLE BLUETOOTH ON THE T-BERD 5800

1. Tap the System icon at the top of the screen.
2. Tap the Bluetooth Icon.
3. Check "Enable Bluetooth".
4. Check "Allow other devices".

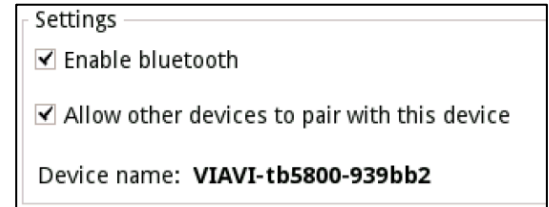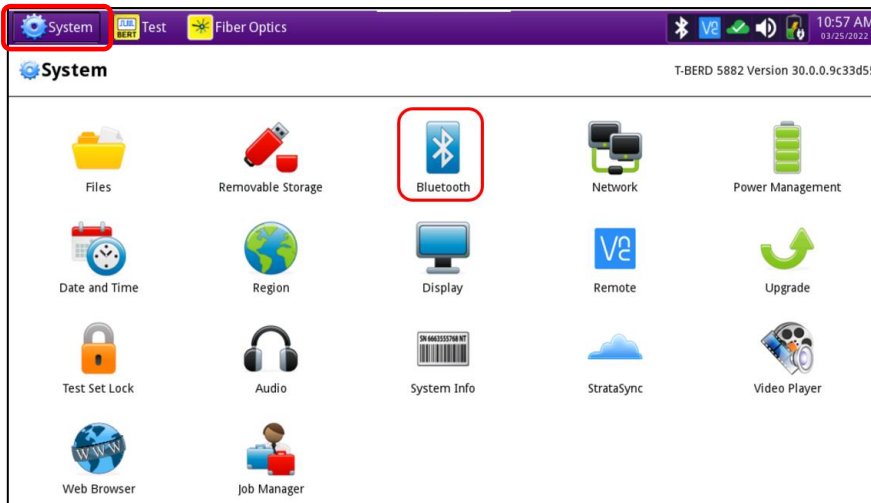

#### PAIR Apple WITH T-BERD 5800

1. In the Apple device, Opens Setting and Bluetooth. Search for the Viavi-tb5800-xxxx.
2. Search for Viavi-tb5800-xxxx.
3. Connect to Viavi-tb5800-xxxx.




## QUICK CARD


### LAUNCH THE MOBILE TECH APP ON Apple

LAUNCH THE MOBILE TECH APP ON Apple


1. From the App Store, search for “**Viavi**”.
2. Install **Mobile Tech**

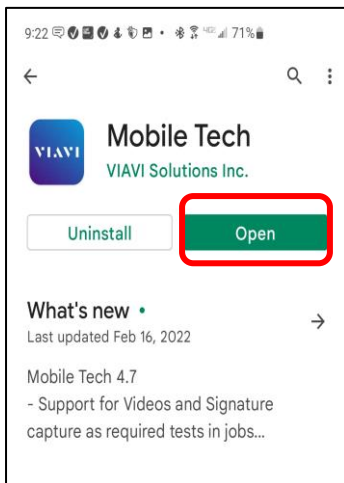

3. Select **[LOCAL MODE]**.

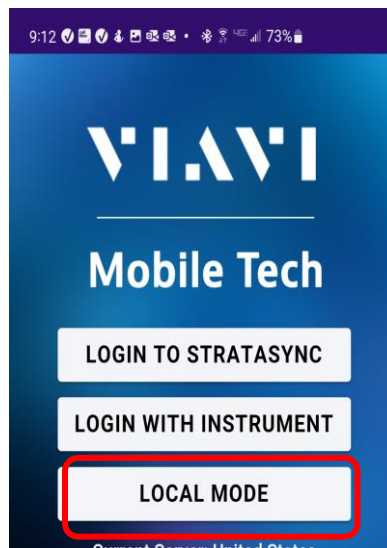


4. Select **[VIAMI-tb5800-xxxx]**.

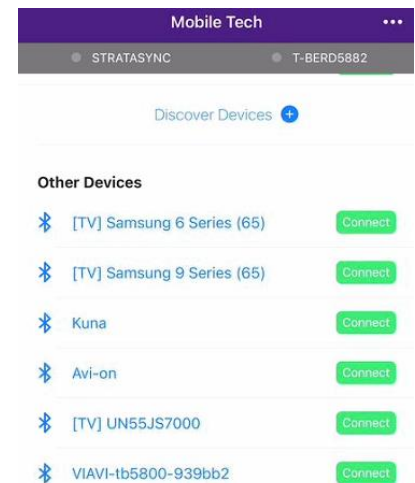

### DOWNLOAD REPORT(S) FROM THE T-BERD

1. Press the **T-BERD58xx Files** button.

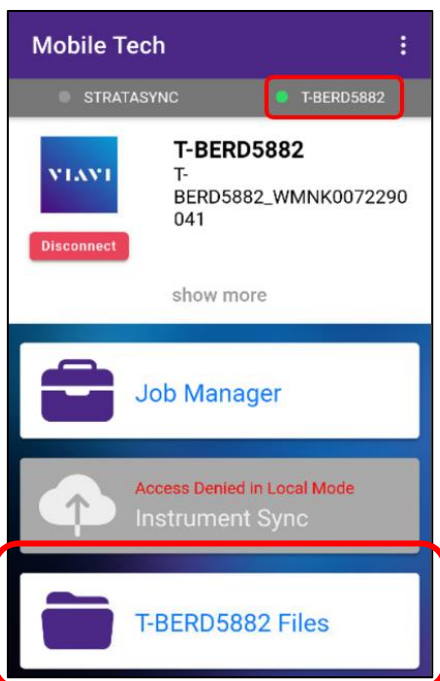

2. Select the “**bert**” folder.




3. Select the “**tests**” subfolder.



4. Press a down-arrow to download the test report.




5. A green checkmark indicates the file has been downloaded.

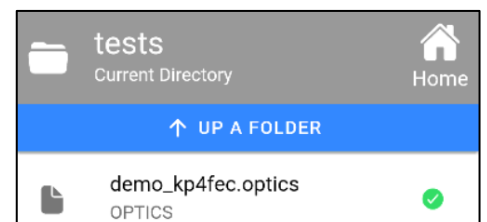


## QUICK CARD


### EMAIL THE TEST REPORT


1. To email a file from the Mobile Tech app, press **<Back>** to return to main menu.




2. Press [**Mobile Tech Files**] to view downloaded files.

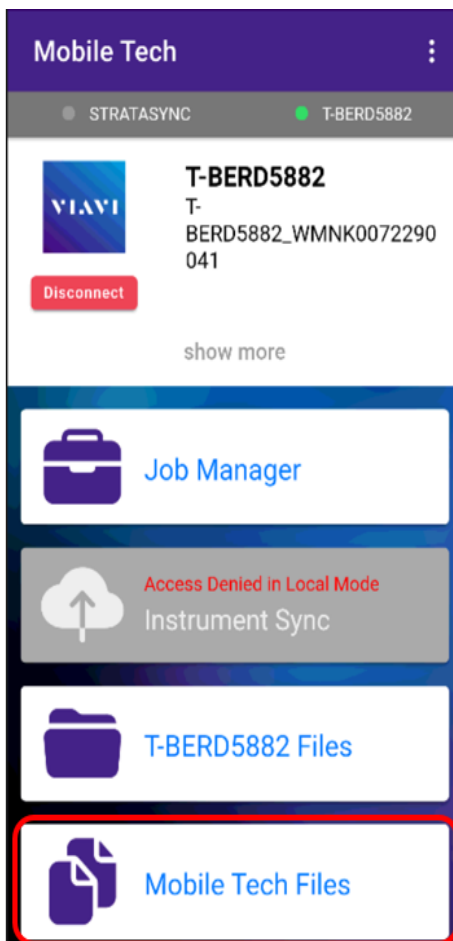


3. Press the up-arrow  next to the desired file.

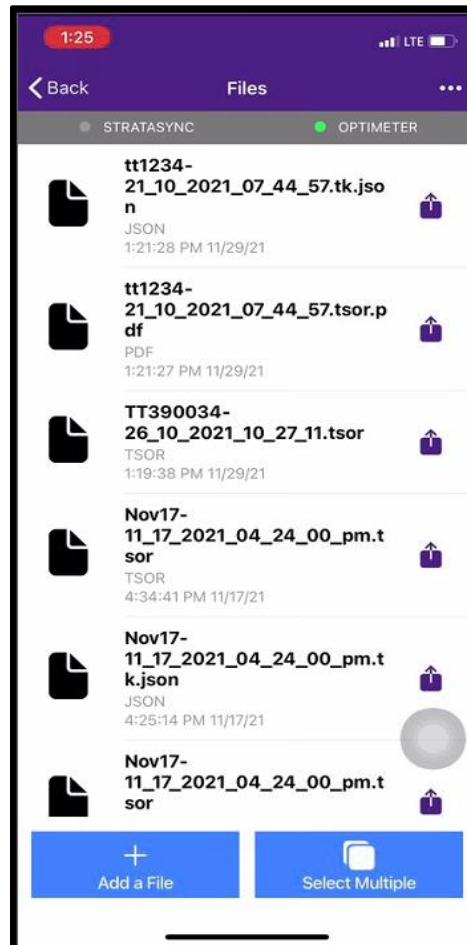

4. In pop-up, choose [**Export to another app**]

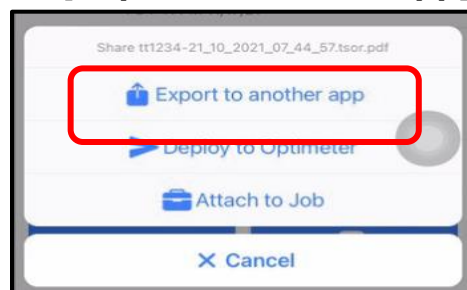

5. Select preferred method to send file: email, text, etc.

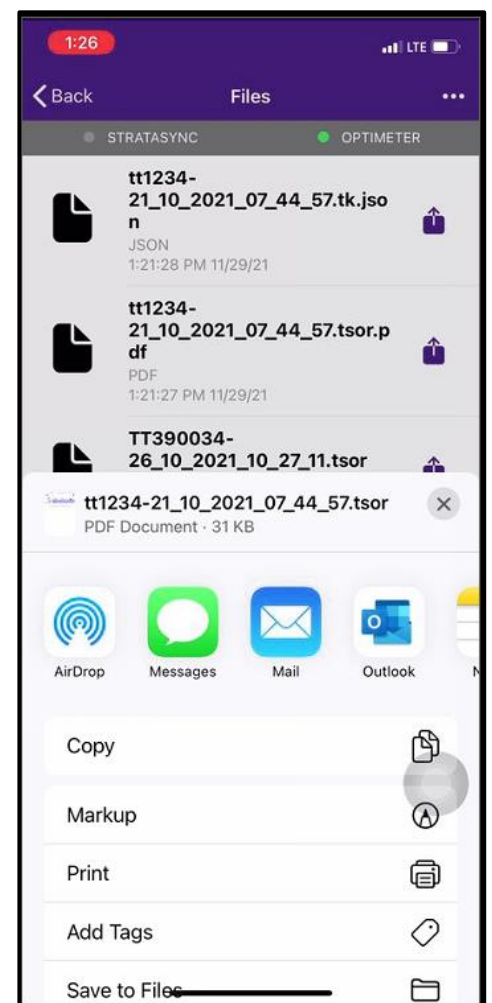

6. Send the file using the selected application.